



Just Listen.

Phone: 866-787-7881

Fax: 815-364-0242

atsinfo@atsacoustics.com

www.atsacoustics.com

Tools You'll Need

Phillips screwdriver
Power drill
3/16" drill bit
Hammer

Fastener Identification



#8 pan head screw



conical anchor



washer

ATS Tri-Corner Panel Installation Instructions




Step 1: Place Tri-Corner template against the right wall. If mounting in a corner, make sure the top of the template is flush with the ceiling. Mark the holes (dark shaded dots) through the template onto the wall based on the size of the panel you are installing.

Step 2: Once you have marked the right wall, flip the template horizontally and place it front side down against the left wall. Mark the left wall using the same holes.


Step 3: Drill a hole through each mark made on the wall using a 3/16" drill bit. Be sure to use an appropriate drill bit based on the kind of walls you are working with.

Step 4: Once holes are drilled, insert plastic anchors into the holes. Lightly hammer the anchors flush if needed.

Step 5: Place the washer over the anchor and use the provided screws to affix the washer tightly to the wall. Repeat this step for each mounting point.

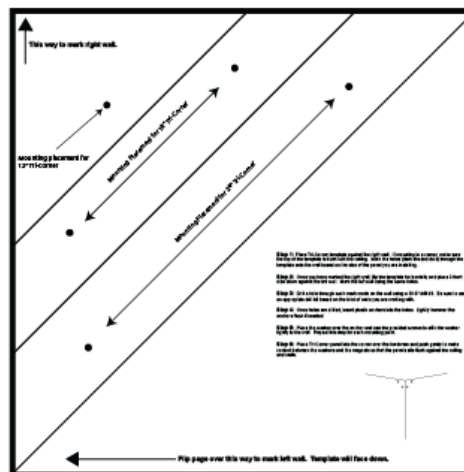

Tri-Corner Template

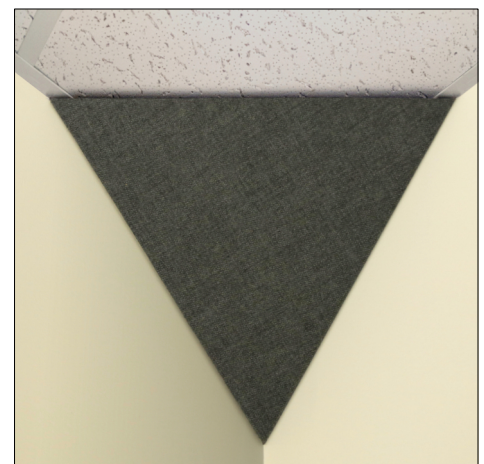

Tri-Corner Panel installed

Step 6: Place Tri-Corner panel into the corner over the hardware and push gently to make contact between the washers and the magnets so that the panels sits flush against the ceiling and walls.